




Online UPS PP1-15KL

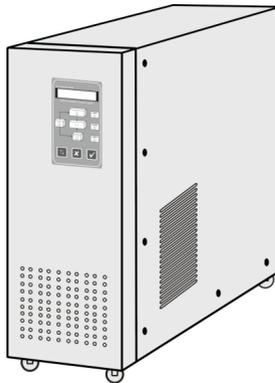

User Manual

Contents

CONTENTS.....	I
1 BRIEF INTRODUCTION.....	1
1.1 PROLEGOMENON	1
1.2 FIVE DESIGN POINTS	1
1.3 NOTE.....	1
2 CONFIGURATION AND FUNCTION	3
2.1 FRONT PANEL	3
2.2 APPEARANCE.....	5
3 PLACEMENT NOTES.....	6
3.1 TRANSIT OR MOVE.....	6
3.2 PLACEMENT	6
4 INSTALLATION	9
4.1 INPUT	9
4.2 OUTPUT.....	13
5 OPERATION PROCESS	16
5.1 PREPARE BEFORE START-UP.....	16
5.2 OPERATION PROCESS FOR FIRST START-UP	16
5.3 OPERATION PROCESS FOR ROUTINE TURN-OFF	18
5.4 OPERATION PROCESS FOR LONG-TIME NO SWITCH ON/OFF	18
6 STATUS HANDLING.....	19
6.1 SYMBOL SIGNIFICATION	19
6.2 UPS RUN STATUS INDICATION AND HANDLING WAYS WHEN NORMAL.....	19
7 MOVEMENT HANDLING	28
7.1 UPS SYSTEM CONFIGURATION BLOCK FIGURE: FIGURE 32	28

7.2	UPS RUNNING WAY WHEN UPS RUNS NORMALLY	28
7.3	UPS RUNNING WAY WHEN UTILITY DISCONNECTED	29
7.4	UPS RUNNING WAY WHEN UPS RUNS ON BYPASS MODE	29
7.5	BATTERY AND CHARGE	30
7.6	DAILY MAINTENANCE	31
8	COMMUNICATION INTERFACE	32
9	SPECIFICATION	34
10	SHIPPING LIST	36

1 BRIEF INTRODUCTION

1.1 Prolegomenon

The product is designed specially aiming at the requirement of MINI and MICRO level computer with exquisite quality and excellent function, easy to operate. With the development of customer office automatism and computerism, considering the bulk and the position of positing space, the noise disturbance to personnel in office, the light, thin, short and small product is our design direction, and we stress low noise. So this product is optimum supply power partner for office and makes you can attain optimal clean power quality.

1.2 Five design points

1. Small bulk and no occupation space
2. Light weight and convenience to transit
3. Beauty and nature, easy to install
4. Convenient to maintain and easy to operate
5. Package material with environment protection and no pollution to environment

1.3 Note

The manual makes you can operate and maintain the system easily. To normally exert all functions of the system, please note the following:

1. Read the manual carefully before use
2. Perform the operation strictly according to operating process
3. Place the equipment carefully and lightly when moving the equipment
4. Install the power according to illumination in the manual
5. Please do not open the cover to avoid injury caused by electrical shock
6. Please charge batteries once every a period if no used for long time

-
7. Do not use UPS on the condition of overload to avoid UPS fault
 8. Please carefully keep the manual for the future reference
 9. Please handle the system according to “ABNORMITY HANDLING PROCESS” if there presents any abnormal phenomenon in machine.
 10. Please keep UPS neatness and cleanness

2 CONFIGURATION AND FUNCTION

2.1 Front panel

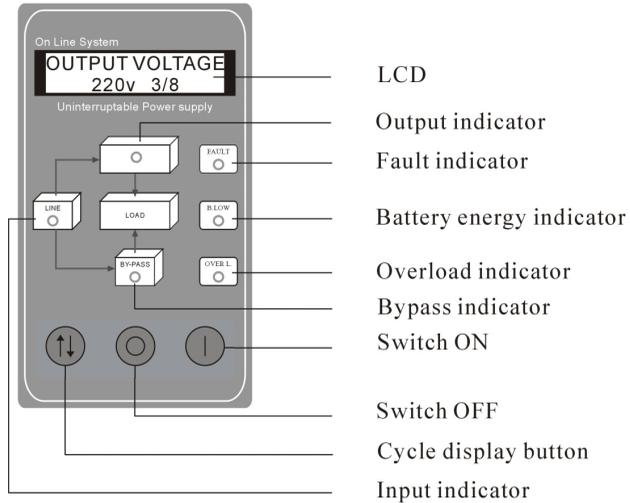


Figure 1. Symbol instruction of front panel indicator

- 1) Welcome screen
WELCOME TO
××××××××
- 2) Display of system status
×××××
××KVA.
- 3) Display of input voltage value*
ON LINE
AC IN: 220V
- 4) Display of input frequency value*
ON LINE
AC FRE: 50Hz

-
- 5) Display of output voltage value*
ON LINE
OUTPUT: 220V
 - 6) Display of output frequency value
ON LINE
OUT FRE: 50Hz
 - 7) Display of output power Percent
ON LINE
LOAD: 80%
 - 8) Display of battery voltage value
ON LINE
BATTERY: 218V
 - 9) Temperature display in machine
ON LINE
TEMP: 33°C

Note: ON BYPASS mode, the output voltage and frequency are displayed be “0” .LED would display only after the unit is switched on.

***These parameters vary with machine model.**

- 10) LCD cycle display switch button: digital signal display items switch button.
- 11) UPS switch button: UPS general switch button.
 - (1) Turn on UPS inverter by pressing the “ON” key. UPS convert to UPS inverter power output 20s later, UPS pure AC output power is supplied by UPS internal power supply equipment.
 - (2) By keeping pressing the OFF switch for 3s, we can shut down the inverter, turn the UPS to bypass mode.

The button acts as general switch mainly.

2.2 Appearance

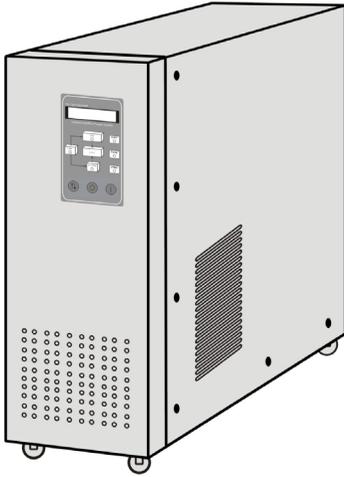


Figure 2 Front panel

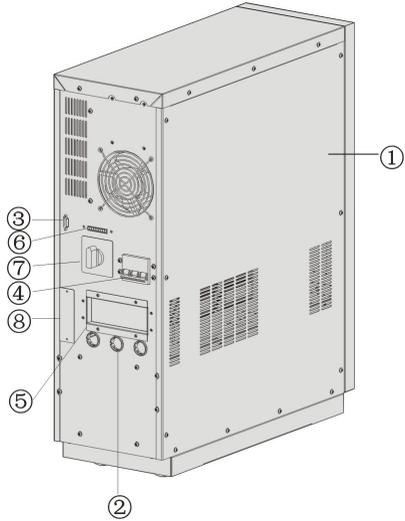


Figure 3 Rear panel

① Emission heat ventilation hole:

The ventilation hole and other small long elliptic ventilation holes should be kept good ventilation.

② Wiring inlet/outlet hole:

Wiring inlet/outlet hole of input, output and battery pack.

③ RS232 communication interface receptacle

Standard communication interface between UPS and computer.

④ Power switch:

Power switch controls input, output and battery power switch at the same time.

⑤ Wiring Terminal support

Power wiring Terminal support of input, output and battery.

⑥ Dry contact.

⑦ Maintenance switch.

⑧ SNMP card.

3 PLACEMENT NOTES

3.1 Transit or move

1. Please dismantle all barge connection firstly. (First turn off before performing)
2. Place lightly and carefully, forbid to hit.
3. Please do not move UPS inverted.

3.2 Placement

1. Do not place the UPS on the slope or scraggy land. (Figure 4)

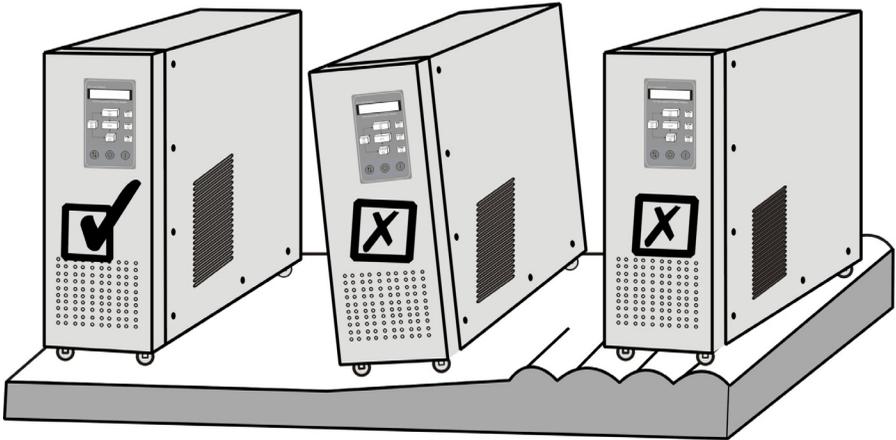


Figure 4, choice of placement position

2. Please place the UPS in the place where keeps good ventilation, rear panel of UPS and two side faces should keep more than 10cm away from the wall. (Figure 5)
3. Do not install UPS under sunlight, drain and damp place. (Figure 6, 7)

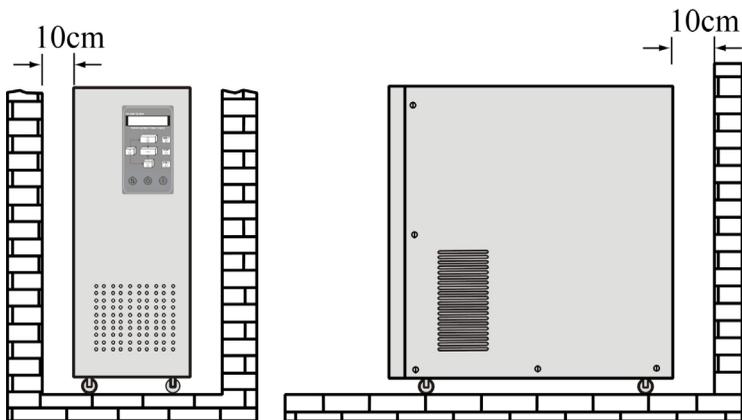


Figure 5



Figure 6



Figure 7

4. Please keep away from fire source and high temperature to avoid over-high temperature. (Figure 8)
5. Do not lay goods on the UPS. (Figure 9)
6. Do not install UPS in the place where contains caustic gas. (Figure 10)
7. Running environment temperature: 0°C-40°C.

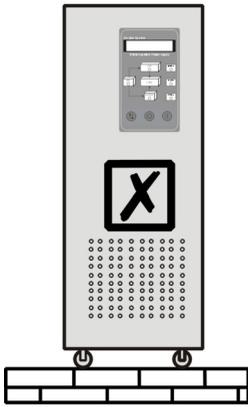


Figure 8

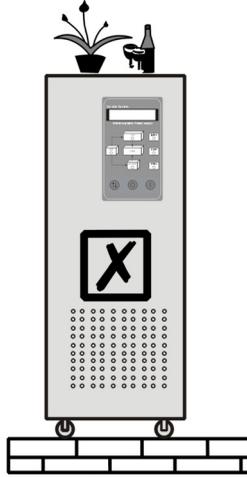


Figure 9

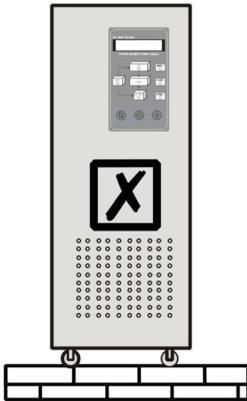


Figure 10

4 INSTALLATION

4.1 Input

1. Prohibit using general household socket, because the Max. current of general socket is 15A, the socket may be burned down because of overload.
2. Please connect UPS input terminal to utility power in nearby switchboard. Figure 11.

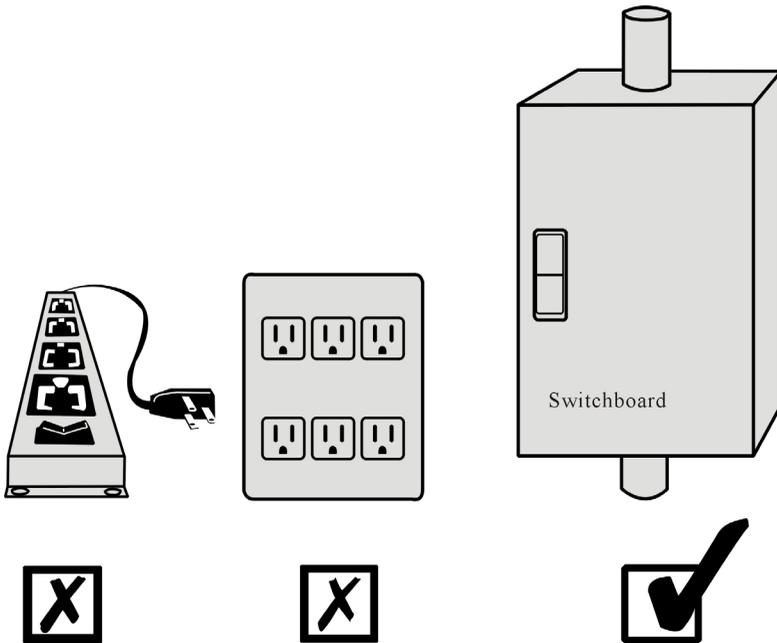


Figure 11

Note: Don't make anti-connection of polarity

-
3. Position and way of connect
 - (1) Remove two screws with “+” screw-driver (Figure 12)
 - (2) Open the back panel and inspect the wiring terminal below the power switch. (Figure 13)
 4. Relock the special cover after completing connection.
 5. Please first fetch in the power cables of input, output and batteries pack through inlet/outlet hole of distribution electricity and then barge connect to terminal plate.

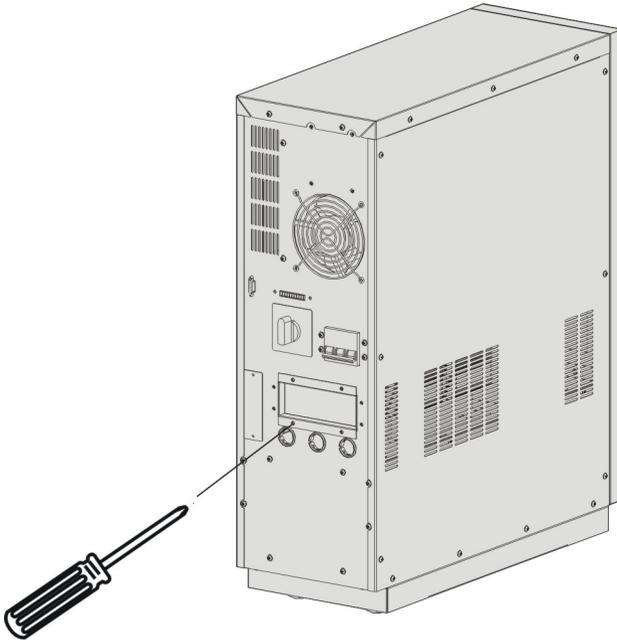


Figure 12

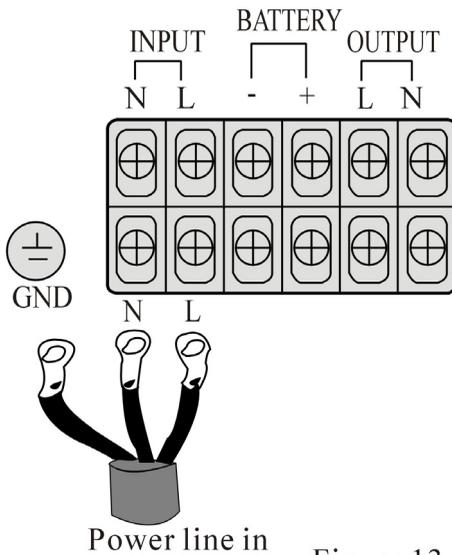
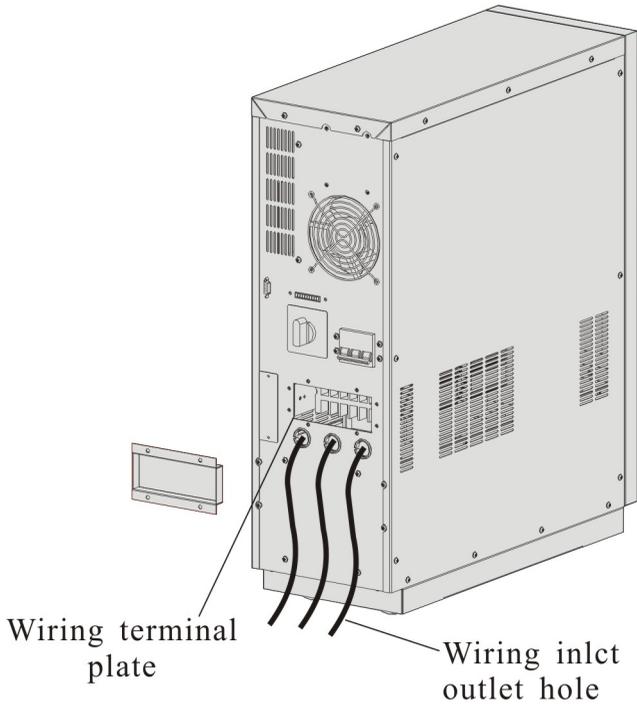


Figure 13

6. Please connect power correctly

Simple identification way to power polarity:

- (1) Line (L): There is 220V relative to other two holes.
- (2) Neutral (N): there is 220V relative to the Line, there is 0.5-2V relative to the ground.

(Load current circulate through neutral)

- (3) Ground (G): Please find out correct connecting point to the ground in the switchboard.

7. If the difference between the neutral and the ground is more than 5V or it can't meet the requirement of system, please reinstall good grounding system to keep safety of system operation.

8. The comparison list of input current rating and input cable size is as follows:

Model	Max. input current	Input wire	Terminal specification
Online UPS PP1KL	5A	12AWG	5.5~6
Online UPS PP2KL	10A	10AWG	5.5~6
Online UPS PP3KL	15A	10AWG	5.5~6
Online UPS PP4KL	20A	10AWG	5.5~6
Online UPS PP5KL	25A	10AWG	5.5~6
Online UPS PP6KL	30A	10AWG	5.5~6
Online UPS PP8KL	40A	8AWG	8.5~8
Online UPS PP10KL	50A	8AWG	8.5~8
Online UPS PP12KL	60A	5AWG	16~8
Online UPS PP15KL	75A	5AWG	16~8

9. The power cable and the impaction terminal must be first grade product manufactured by authentic manufacturer. Prohibit use spent and inferior product.

10. The power cable must be impacted by impaction terminal of authentic manufacturer, prohibit directly wrapping power cable to the terminal plate.

11. After fastening input cable, please see if the input cable contacts with protection cover and avoid short-circuit.

12. Please turn off power when connecting cable, prohibit operation on

live and keep safety.

13. Please follow the electrician law when installation.
14. Avoid using the same switch with other equipment when connect to switchboard, try to connect cable to utility terminal. Figure 14.

15. In $3\phi 4W$ system, please respect-Tively measure the voltage between R/N,S/N, T/N with ammeter firstly and see if they are close to 220V, then connect L cable of UPS to the cable whose voltage measured is the highest (means supply power of this phase is lighter than that of other two phase), the N cable of UPS is connected to utility neutral cable N,

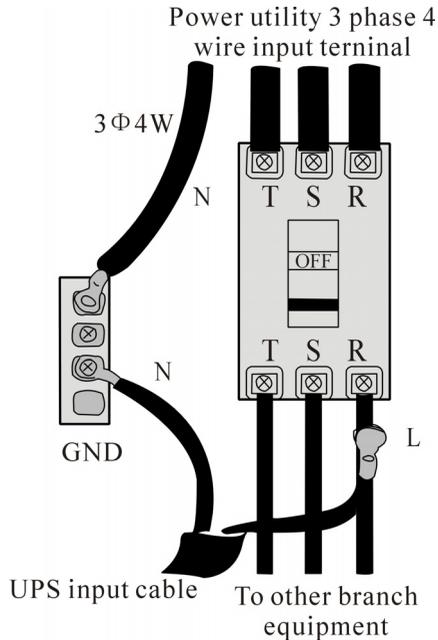


Figure 14

the UPS-GND is connected to grounding club.

16. If the model of the unit you purchase is input voltage of 110V, please connect UPS-L cable into line, connect N cable into neutral cable, and connect UPS-GND cable to grounding club.

Please note that this equipment is a system of 220V or 110V, do not connect 380V, and avoid causing any fault.

4.2 Output

1. Please refer to output installation principle when installation.

2. Position and way of connection, refer to figure 15.

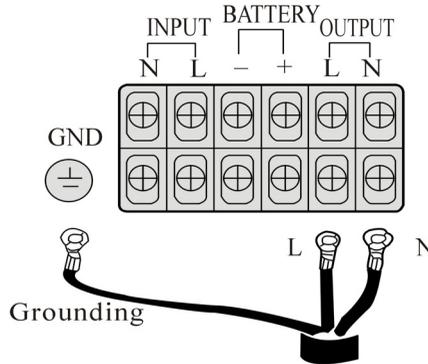


Figure 15

3. Output power cable is designed according to load current, do not use over-thin cable. Please refer to Table 2

Model	Max. output current	Output cable	Terminal specification
Online UPS PP1KL	4A	12AWG	5.5~6
Online UPS PP2KL	8A	10AWG	5.5~6
Online UPS PP3KL	12A	10AWG	5.5~6
Online UPS PP4KL	16A	10AWG	5.5~6
Online UPS PP5KL	20A	10AWG	5.5~6
Online UPS PP6KL	24A	10AWG	5.5~6
Online UPS PP8KL	32A	8AWG	8.5~9
Online UPS PP10KL	40A	8AWG	8.5~9
Online UPS PP12KL	48A	8AWG	8.5~9
Online UPS PP15KL	60A	5AWG	16~9

Table 2

4. Avoid short-circuit and overload.
5. The comparison between output current rating and output cable size is listed in Table 2.
6. The ground to this unit only acts as reference point, if the ground isn't good, that may cause disturbance and false datum management, and affect UPS and computer, please ask professional personnel for handling immediately.
7. User offers a good grounding system.
8. Try to make the ground close to connecting point of grounding club or

origination point in switch- board. Please refer to figure 16.

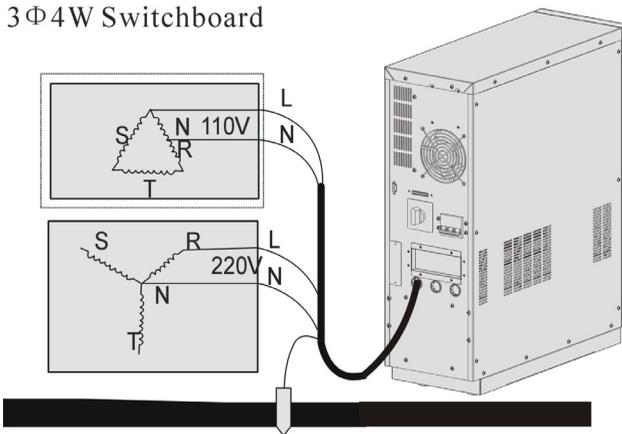


Figure 16

*** Please install wiring according to input voltage system purchased
Please contact professional personnel or our service department if there
is problem in installation.**

4.3 DC input wiring

1. DC input connection please refer to AC input installation rules.
2. Connection way and position, please refer to figure 17.

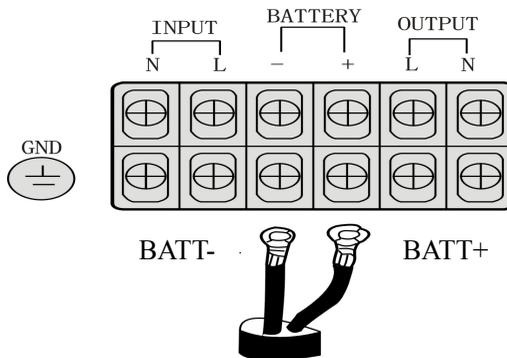


Figure 17

5 OPERATION PROCESS

5.1 Prepare before start-up.

To make UPS normally and correctly run, please confirm the following items. (Refer to figure 2)

1. Verify power switch on back panel is on the “OFF” position.
2. Verify the installation position again. (Figure 4 to 10)
3. Rock power cable by hand and see if there is any looseness, retighten them if looseness.
4. Do not connect load.
5. Inspect if input voltage meet the demand of UPS (220V±10%) with ammeter.

5.2 Operation process for first start-up

After verify the above items are correct, please turn on UPS according to the following ways:(Please refer to figure 1, figure 2, figure 3)

1. Please switch power switch “NON- FUSEBREAKER” (NFB) on the back panel to the “ON” position. Input indicator light and bypass indicator light on the front panel are lit on at the same time. Aright figure.

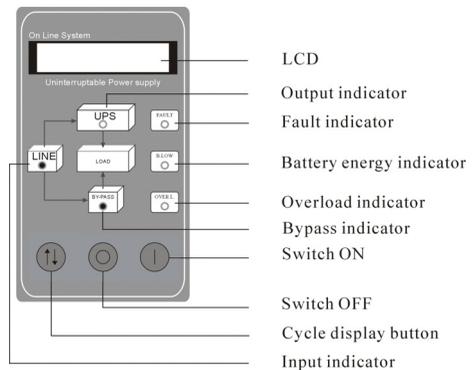


Figure 18

- Press the “ON” button on front panel. As right figure. The input indicator and the bypass indicator are solid on. LCD display is lit on. Output is utility powered via bypass.

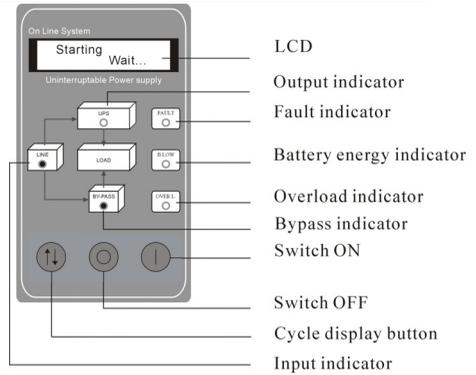


Figure 19

- After 20s, input indicator light on front panel is lit on, bypass indicator is off, and output indicator is lit on. The welcome information is displayed on LCD, output is UPS inverter powered

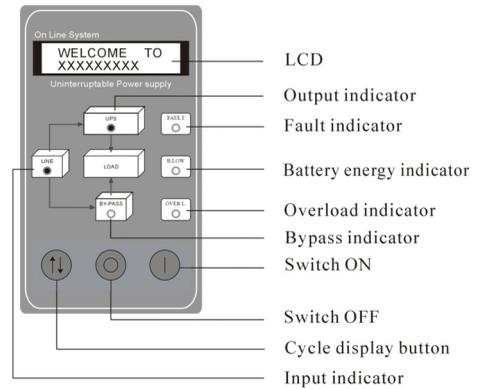


Figure 20

- Shutdown input power of UPS, utility indicator light is off, the welcome information is displayed on LCD, and output is UPS inverter powered, as following drawing. UPS sounds every four seconds, which indicates UPS runs on battery mode at present. The sound will automatically stop 90s later. UPS will sound alarm every 1s again when battery power is to be exhausted.

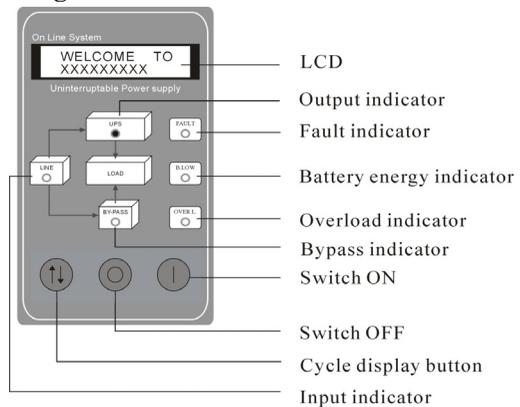


Figure 21

-
5. Utility indicator will be lit on when UPS input power source is resumed. Press the LCD display cycle switch button to switch items displayed, inspect if the display value is normal, thus first startup procedure has been completed. Please measure output voltage and see if it meets the requirement, then connect load to UPS output terminal. Use pure power provided by UPS.
 6. After connect load, press LCD display cycle switch button to switch items displayed till display the output power display percent %. If the value displayed is more than 100%, please dismantle the unimportant load till the value displayed is less than 100%.

5.3 Operation process for routine turn-off

If you want to switch on/off UPS when daily using, please operate UPS according to the following ways:

1. You can switch off UPS by pressing the “OFF” button on front panel. At the time UPS is on bypass mode, output is utility powered and the batteries are charged.
2. Always turn on UPS by pressing down the “ON” button when daily operation.


5.4 Operation process for long-time no switch on/off

1. If UPS is not used above ten days, please first turn off UPS by pressing the “OFF” button on front panel, then switch the power switch NFB on back panel to the position of “OFF”.
2. If UPS is not used above three months, please run UPS for above 24 hours reference to the first start-up process and keep the battery the full voltage level to extend battery life.

6 STATUS HANDLING

6.1 symbol signification

Note: If indicator light flash, the flash period is synchronal with that of buzzer sounds

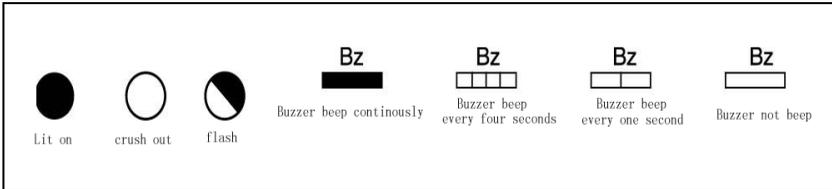

6.2 UPS run status indication and handling ways

when normal

Please refer to indicator on UPS panel, LCD indicator value and buzzer sound, you can know if UPS running is normal, if abnormal, please refer to the handling way according to panel indicator status.

1. Panel indicator status is as the right figure:

(1) UPS running status:
Utility is normal, UPS runs normally and UPS is used under full-load.

(2) Handling way:
needn't handling.

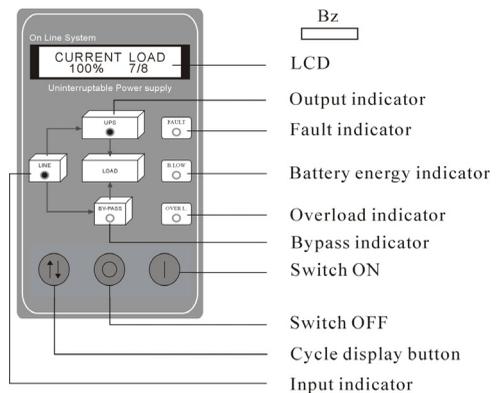


Figure 22

2. panel indicator status is as the right figure :

- (1) UPS running status:
Utility is normal, UPS runs normally and battery capacitor is above 90%.
- (2) Handling way:
needn't handling.

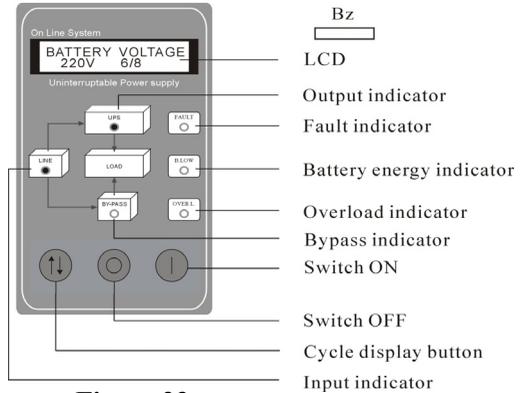


Figure 23

3. panel indicator status is as the right figure:

- (1) UPS running status:
Utility supplies power of 220Vac normally and UPS runs normally.
- (2) Handling way:
needn't handling.

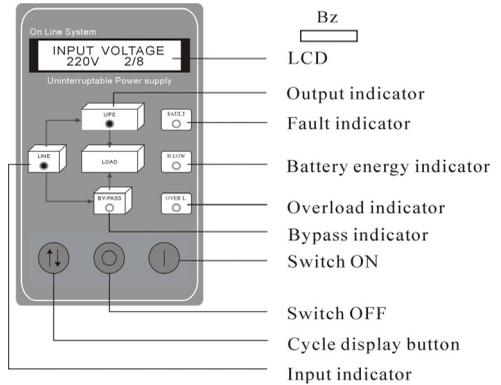


Figure 24

4. panel indicator status is as the right figure:

- (1) UPS running status:
Utility is normal, UPS runs normally and battery voltage is low.
- (2) Handling way: The charger is fault, please replace charging board.

***Note: the material parameters indicated vary with the machine type.**

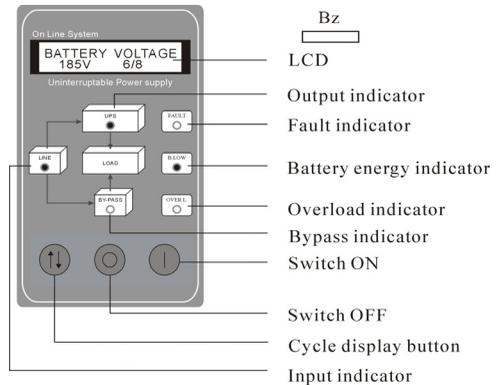


Figure 25

5. panel indicator status is as the right figure:

(1) UPS running status

Utility power is normal and it converts to utility mode. UPS don't start up if didn't press the "ON" button down on the UPS panel.

(2) Handling way:

Please deal with it refer to status dealing flow Chart 2.

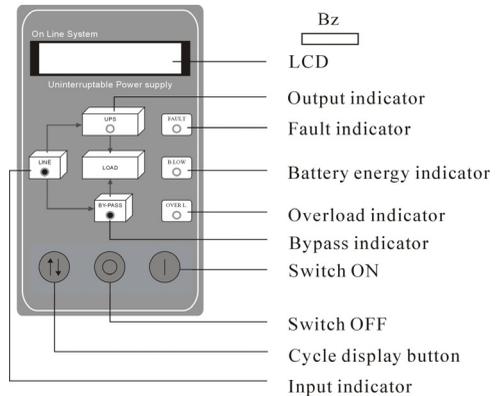


Figure 26

6. panel indicator status is as the right figure:

(1) UPS running status:

Utility supplies power. Under overload 125%, overload indicator is lit on and the buzzer long beeps.

(2) Handling way:

Please remove load to ensure the percent of LCD output power indicated is below 100%.

If the problem still presents after removing load, please refer to flow Chart 3 of status handling.

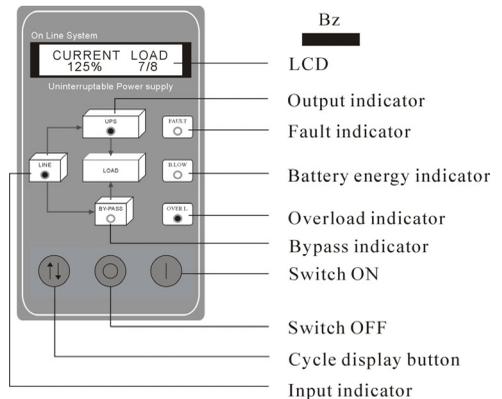


Figure 27

7. panel indicator status is as the right figure:

(1) UPS running status:

Utility power is normal, UPS runs abnormally and convert to be utility powered.

(2) handling way:

Please refer to flow Chart 4 of status handling.

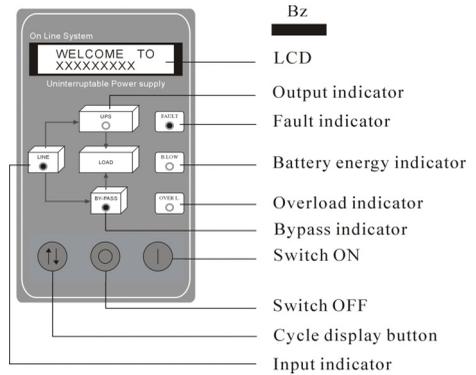


Figure 28

8. panel indicator status is as the right figure:

(1) UPS running status:

Utility power is disconnected, UPS is battery powered and load is full load. Buzzer beeps once every four seconds.

The indicator of battery energy flashes every four seconds (buzzer and indicator stop beep and flash 90s later).

(2) Handling way: If utility is

(3) disconnected normally, please remove non-critical loads to increase used time. If it is disconnected abnormally, please refer to flow Chart 1 of status handling.

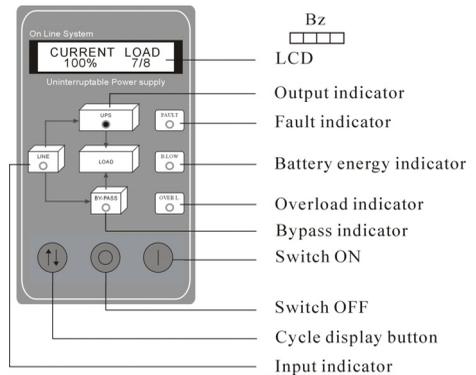


Figure 29

9. panel indicator status is right figure:

- (1) UPS running status: Utility power is disconnected and UPS is battery powered. Buzzer beeps once every one second when the battery power will be exhausted.
- (2) Handling way: UPS will be shut down, please save files and close your computer.

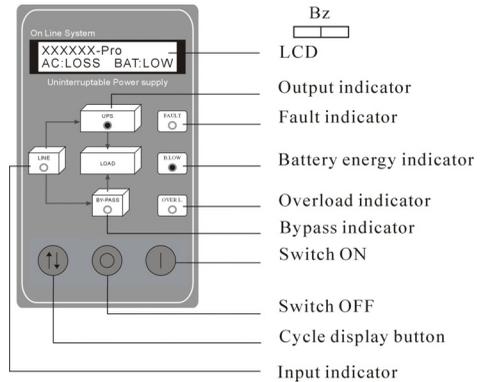


Figure 30

10. panel indicator status is right figure:

- (1) UPS running status: Utility power may have been Disconnected and battery power has been exhausted, shutdown UPS auto- matically.
- (2) Handling way: When utility power comes back, UPS will automatically restart. If utility power is disconnected for long time (above 6 houses), please turn off UPS according to switch on/off program for power disconnection of long time.



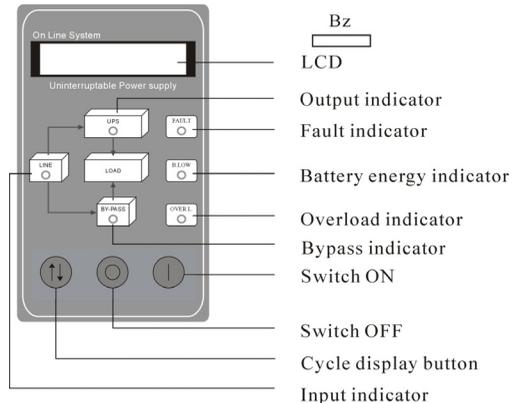



Figure 31

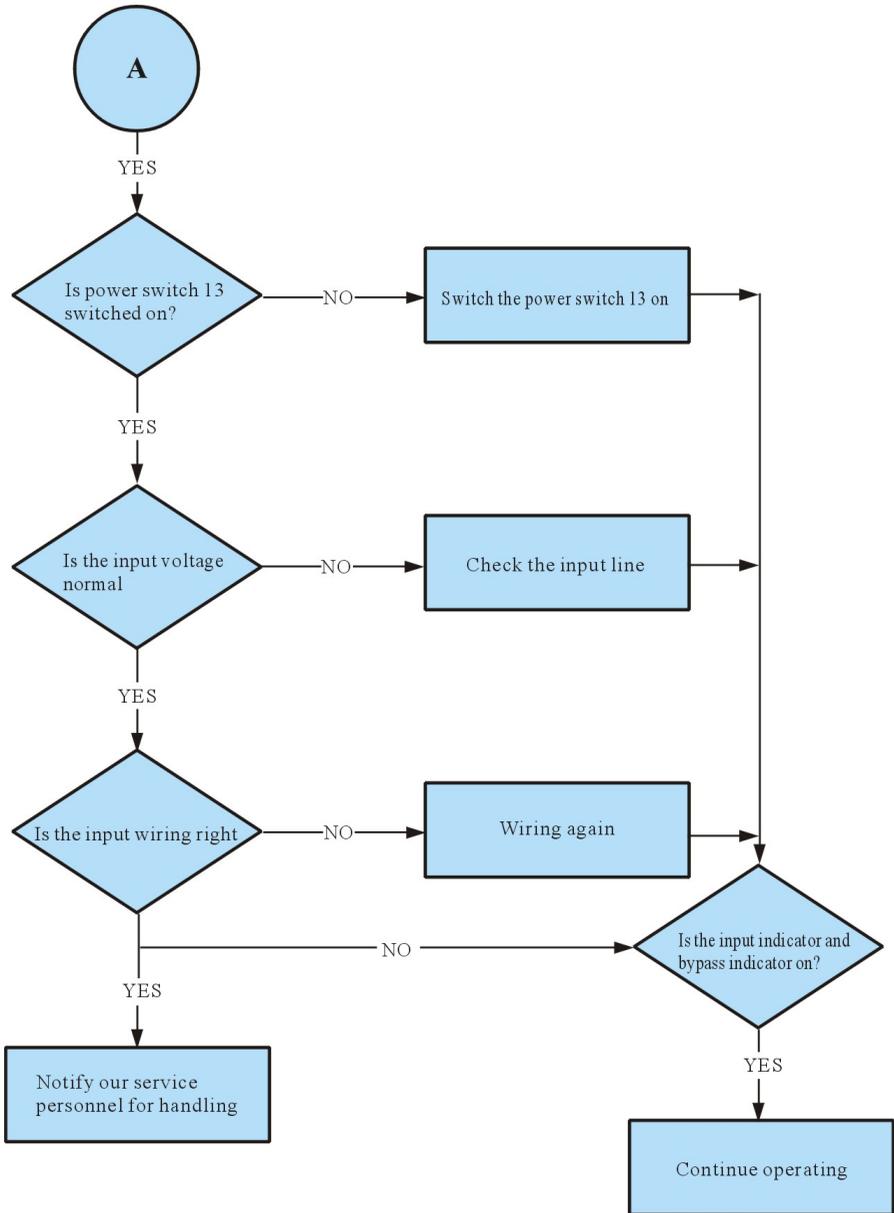


Flow chart 1 of status handling

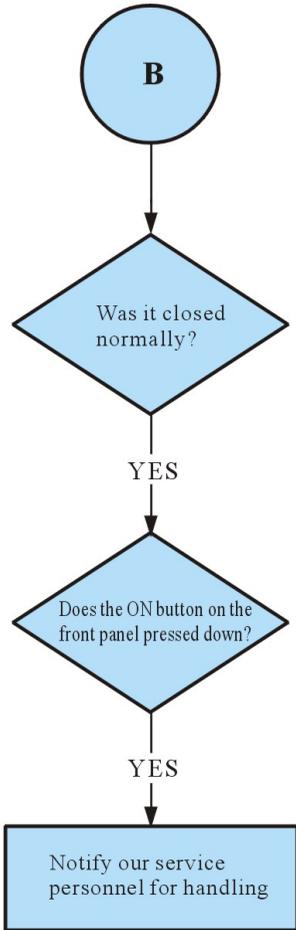

Flow chart 2 of status handing

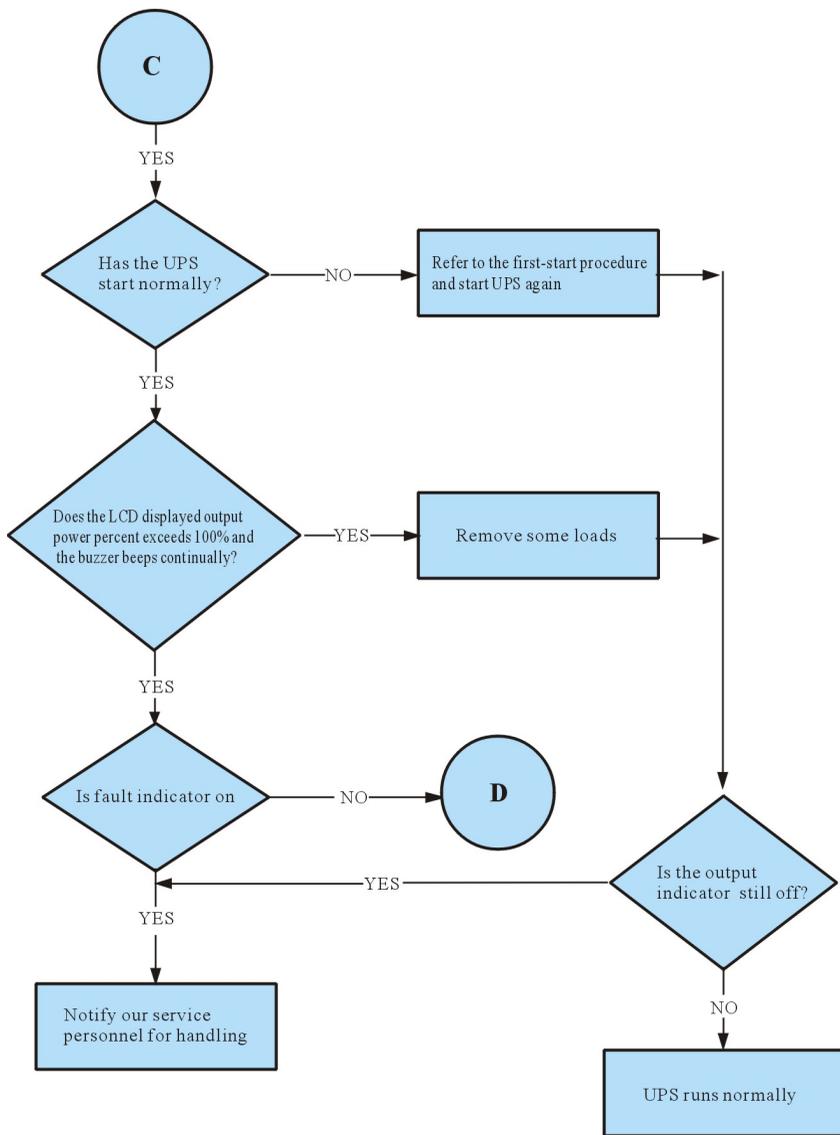

Flow chart 3 of status handing

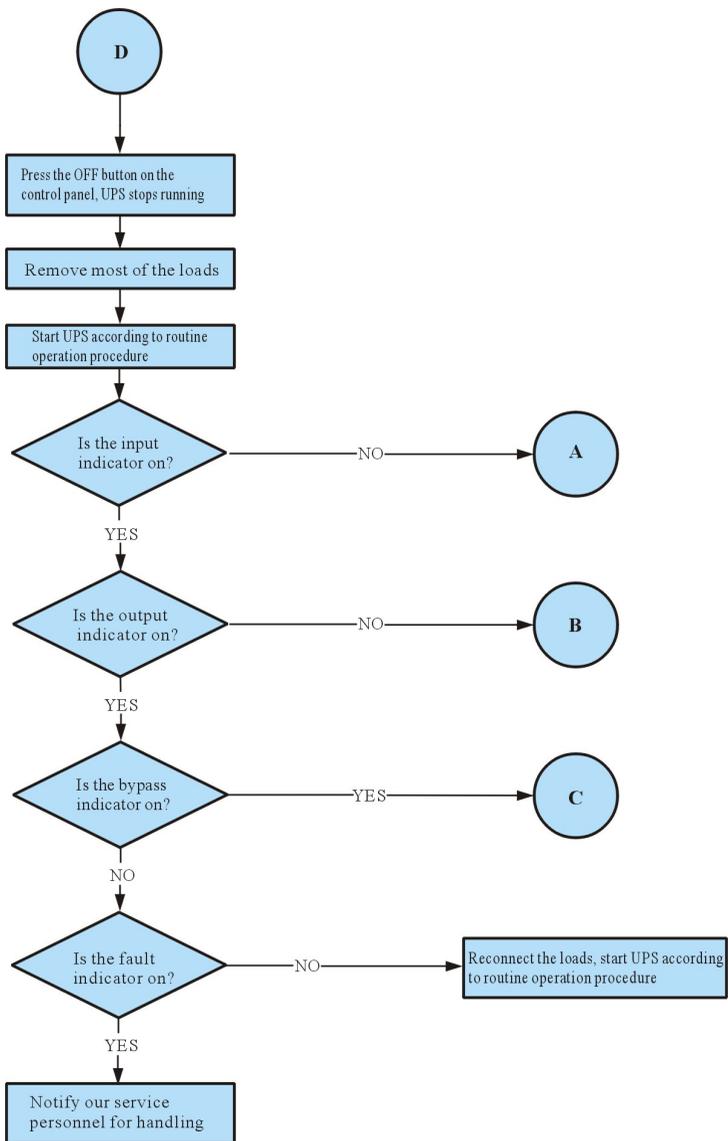

Flow chart 4 of status handling

7 Movement handling

7.1 UPS system configuration block Figure: figure 32

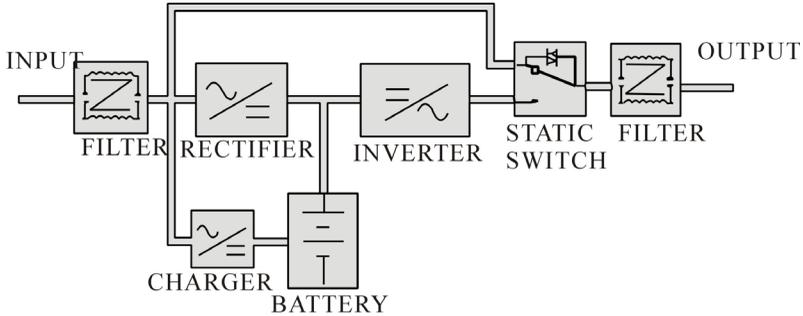


Figure 32

7.2 UPS running way when UPS runs normally

When UPS runs normally, after high-frequency harmonic noise in utility power is filtered by the filter, on one hand utility power charges battery pack via the inverter and keeps battery power on full voltage level, on the other hand utility power is converted into DC power via the rectifier and is converted into pure sine wave power via the inverter, finally power is transmitted to user equipment for using via the static switch and the filter. AT Figure 33.

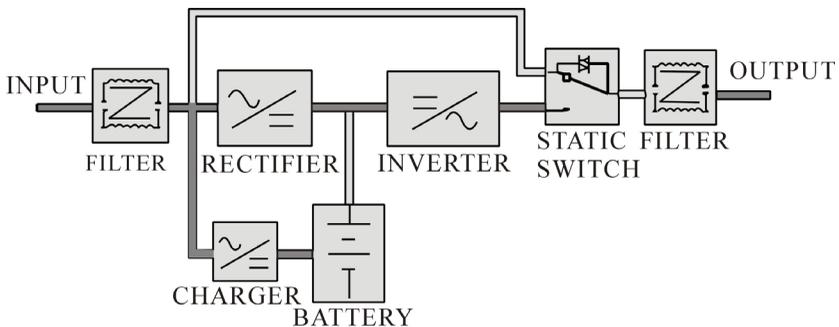


Figure 33

7.3 UPS running way when utility disconnected

As figure 34, when utility disconnected, power is battery supplied to the inverter then is sustention transmitted to user equipment for using via the static switch and the filter to avoid power disturbance to load.

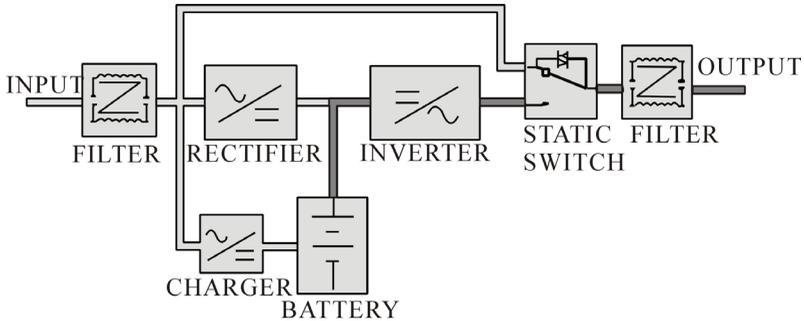


Figure 34

7.4 UPS running way when UPS runs on bypass mode

There are five kinds of status when UPS runs on bypass mode(Figure 35)

1. overload
2. inverter failure
3. when startup, UPS is in the course of slow startup during 20 seconds by pressing the “SWITCH ON” button
4. When switch off, please press the “SWITCH OFF” button.
5. UPS runs under the condition of internal over-temperature.

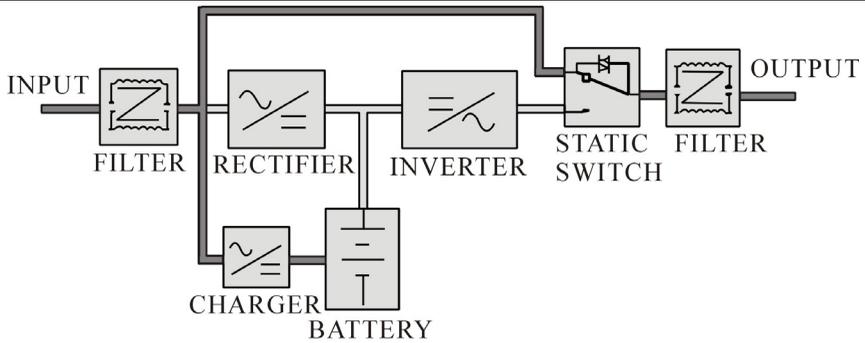


Figure 35

7.5 Battery and charge

1. When power switch on back panel is on the position of “ON”, the batteries can automatically be charged and the charger can charge 90% of the battery capacity after 10 hours.
2. The time that battery supplies power has relation with using rate of load, please refer to figure 36.

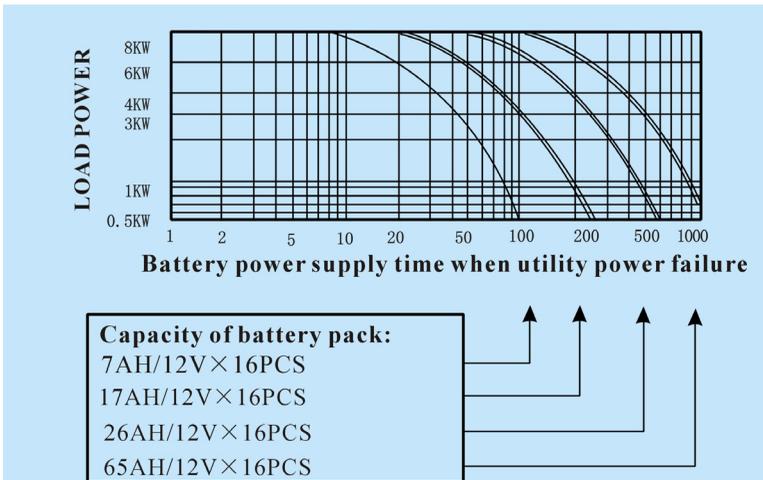


Figure 36

3. If you want to extend the time that the battery supplies power, please ask the professional to increase the battery number and don't make

-
- bold to install the battery to avoid any danger.
4. Please keep the battery full voltage level to extend the battery life.
 5. There are many electron components and there also present high voltage in UPS, so non-technician can't open the panel of UPS to avoid any danger.
 6. With regard to installation and using, please refer to the prescript in this manual.

7.6 Daily maintenance

1. UPS should be cleaned and maintained termly, avoid any dust to ensure machine life.
2. Please clean UPS lightly with soft cloth, don't use grit for instead for ever.
3. Termly inspect all kinds of connection every month and avoid any hit, looseness or humidity.
4. Please keep good ventilation at inlet/outlet hole, termly inspect the hole every month and confirm if there is any jam at inlet/outlet hole.
5. The battery is dry-type and maintenance-free and needless to maintain. If the battery you use is LEAD-ACID battery used by auto, you must inspect the electrolyte in the battery once every month, if the electrolyte is too low, please add distilled water into the electrolyte.

8 Communication interface

- 8.1 The great mass of computer system have equipped UPS to avoid system failure and datum damage due to utility power fault, you can monitor and control the power status through the connection between the communication interface and UPS.
- 8.2 You can get UPS status through the connection between computer and RS232 communication interface on back panel of UPS. User can connect UPS to the computer and know the running status of UPS at any moment through the computer interface, software and OS such as DOS, WINDOWS3.1, WINDOWS95, WINDOWS/NT, NOVELL, etc. when utility power disconnected, system can know that utility fault and send out alarm information. When the reserved time goes, UPS will automatically save files and close system normal, and then automatically shutdown UPS power. When utility power come back, UPS will automatically run and system can automatically also come back to operate.
- 8.3 The computer interface of UPS offer detailed datum and is suit to net route, workstation, monitoring system, PC, etc.

Computer interface:

It can sostenuto transmit datum through RS232 communication series port and computer. The datum that UPS offers includes input voltage value, output voltage value, output frequency, input frequency, battery capacity percent, used load percent, UPS internal temperature, etc.

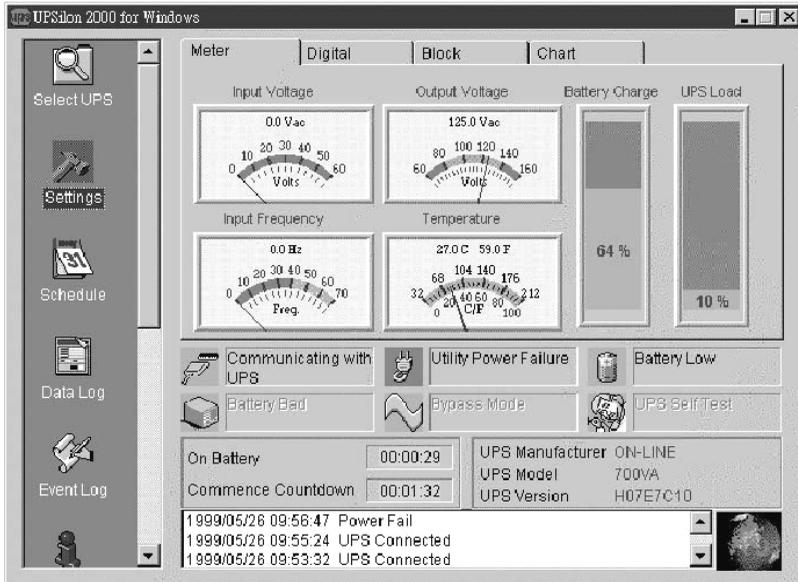


Figure 37

8.4 UPS' hardware equipment

RS232 appearance, figure 38

The pin of UPS' RS is the following:

PIN2: RS232 RXD

PIN3: RS232 TXD

PIN5: GND

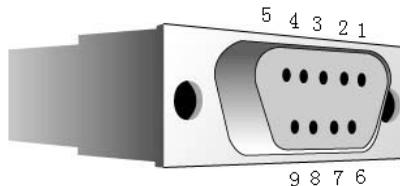


Figure 38

9 SPECIFICATION

Model	Online UPS PP1KL	Online UPS PP2KL	Online UPS PP3KL	Online UPS PP4KL	Online UPS PP5KL	Online UPS PP6KL	Online UPS PP8KL	Online UPS PP10KL	Online UPS PP12KL	Online UPS PP15KL
AC input										
Voltage	176V~264VAC									
Frequency	50(60) Hz \pm 5%									
Phase	Single									
Max.	5A	10A	15A	20A	25A	30A	40A	50A	60A	75A
AC output										
Voltage	220V/230V/240V									
Frequency	50(60) Hz									
Voltage stability	\pm 1%									
Frequency stability	\pm 0.5 (Disconnection)									
Wave form	SPWM sine wave									
Power factor	0.8									
Distortion	<3%(linear load)									
Battery										
Voltage	192VDC									
Model	Lead acid free from maintenance,									
Offer time	Refer to figure 31									
Charging	90% capacity after 8-10 hours									
Alarm										
Utility disconnect	Buzzer beeps once every four seconds									
Battery exhausted	Buzzer beeps once every one second									
Overload	Load indicator light is solid on, buzzer continuously beeps for long-time.									
UPS abnormal	Fault indicator light is solid on, buzzer continuously beeps for long-time.									

Model	Online UPS PP1KL	Online UPS PP2KL	Online UPS PP3KL	Online UPS PP4KL	Online UPS PP5KL	Online UPS PP6KL	Online UPS PP8KL	Online UPS PP10KL	Online UPS PP12KL	Online UPS PP15KL
Internal protection equipment LCD panel										
Battery	UPS automatically shutdowns when battery is low power level, there is no fuse switch protection.									
Overload	When load reaches 110~150% of rating, transfer to bypass after 3s, recover auto.									
Over-temperature	Automatically transfer to bypass if UPS internal temperature > 85℃									
Output short-circuit	Limit current, automatic shutdown, fuse and there no fuse switch protection.									
UPS abnormal	Automatically transfer to bypass and supplied power by utility									
Noise filter	10~100KHz at 40Db; 100KHz~100MHz at 70dB									
LCD display	input, output voltage, frequency, battery voltage, output power (%), temperature									
Battery BVL	One LED, it lit on when battery low voltage									
Environment										
Temperature	0~40℃									
Humidity	20~90% non-condensing									
Noise	<58dB (1m away from enclosure)									
General										
Output socket	Terminal plate									
Unit weight (no battery)	46Kg	55Kg	60Kg	65Kg	67Kg	69Kg	105Kg	115Kg	135Kg	220 Kg
Dimension (mm) W×D×H	230×580×720						305×585×864			409×798 ×1044
Others										
Full efficiency	>85%									
Transform time when utility fault	0s									
UPS status indicator light	Utility, inverter, bypass, UPS abnormal (fault)									
Communication interface	RS232 interface									

10 Shipping list

Order	Content	Number
1	UPS	1
2	«UPS user manual»	1
3	Intelligent monitoring software	1
4	RS232 Computer port cable	1